Lab 15: Working with Databases

In this lab, we will be using the following packages:



This lab will consist of demonstrating the different actions within the **Database** package. We will be using some files from the GitHub repository, which is part of the technical requirements. A sample each of the Access and SQLite databases are included in the GitHub repository and both are used as part of the lab. It is assumed that you already have a basic understanding of databases and SQL statements. You will learn how to configure an RPA bot to execute these statements.

In this lab, we will cover the following topics:

- Connecting to, and disconnecting from, databases
- Reading data from databases
- Updating databases

Technical requirements

In order to install Automation Anywhere, the following are required:

- Google Chrome
- Completed registration with Automation Anywhere Community Edition
- Successful logon to Automation Anywhere Community Edition
- Successful registration of a local device
- · The successful downloading of sample data from GitHub

Connecting to, and disconnecting from, databases

In this lab, you will learn how to do the following:

- · Connect to a SQLite database
- Connect to an Access database

As we have done previously, we will be using comments and steps to help structure all the actions. We will begin by building the initial skeleton using comments and steps:

Let's start this lab by performing the following steps:

- 1. Log in to Control Room.
- 2 Create a new bot and call it Chapter15 Database Automation in the \Bot\ folder.
- 3. Add a new **Comment** action as "-----" and click on **Save**.
- 4. Add a Step, set the Title property as "Connecting to Databases", and then click on Save.

- 5. Add another **Step**, set the **Title** property as "Connecting to a SQLite Database", and then click on Save
- 6. Add another Step, set the Title property as "Connecting to MS Access", and then click on Save.

Connecting to a SQLite database

The following lab will show how to connect to a SQLite database. A sample database called Chapter15 SQLite.db is available as part of the GitHub repository.

Let's start this lab by performing the following steps:

- 1. To create the SQLite database session, drag the **Database: Connect** action. You are now ready to start setting the properties.
- 2. Firstly, we need to specify the session details. To do this, set the following properties for the **Database: Connect** action:

Session name: db SqLite

Connection mode: User defined

The properties should look like the following screenshot:



- 3. Click on Save.
- 4. The next part is to specify the type of database and location of the file. To do this, set the following properties for the **Database: Connect** action:

Database type: SqLite

Database file path: Desktop file -- C:\Hands-On-RPA-with-AA-Sample-Data\Chapter15 SQLite.db

Database: Connect



- 5. Click on Save.
- 6. The SQLite database session is now created. To disconnect, add the **Database: Disconnect** action , ensuring it is aligned to the **Database: Connect** action .
- 7. Set the following property for the **Database: Disconnect** action:

Session name: db SqLite

The property should look like the following screenshot:



8. Click on Save. Your development interface for this section should look like the following screenshot:



All done! You can run the bot to test it. It won't actually do anything visible, but we know it establishes a connection with our SQLite database and then disconnects.

Later in this lab, you will learn how to read data after creating a session. Continuing with connecting with databases, we move on to Access databases in the next section.

Connecting to an Access database

Microsoft Access is part of the Microsoft Office suite and is a very popular database platform. A sample database, Chapter15 Access.accdb, is included in the GitHub repository. We will be connecting to this for the following

lab.

Let's start this lab by performing the following steps:

- 1. To create the Access database session, drag the **Database: Connect** action , ensuring it is within the **Step** . You are now ready to start setting the properties.
- 2. We first need to specify the session details. To do this, set the following properties for the **Database: Connect** action on line **10**:

Session name: db Access

Connection mode: User defined The properties should look like the following screenshot:



- 3. Click on Save.
- 4. The next part is to specify the type of database and the location of the file. To do this, set the following properties for the **Database: Connect** action:

Database type: Microsoft Access

Database file path: **Desktop file** -- C:\Hands-On-RPA-with-AA-Sample-Data\Chapter15_Access.accdb

The properties should look like the following screenshot:

Database: Connect




- 5. Click on Save.
- 6. We now have to add the **Database: Disconnect** action. To do this, add the **Database: Disconnect** action, ensuring it is aligned to the **Database: Connect** action on line **10**.


7. Set the following property for the **Database: Disconnect** action:

Session name: db_Access

The property should look like the following screenshot:

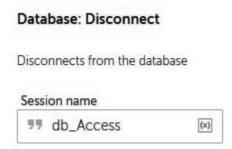

8. Click on Save. Your development interface for this section should look like the following screenshot:

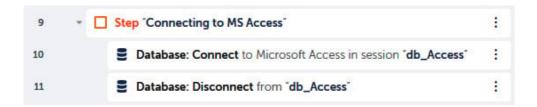

Now you know how easily a database connection can be established to a Microsoft Access database.

In the next section, you will learn how to read data from databases.

Reading data from databases

Naturally, the next stage is to access the data from our database. In this section, you will learn how to execute a SQL Select statement to retrieve data. A Select statement is commonly used among most databases.

Before we move on to the next section, let's disable our actions from the previous section. To do this, just click on the three dots on line **2**, select the **Disable** action, and then click on **Save**. This is designed to ensure that it doesn't interfere as we proceed with reading the data.

To read data, we will need to create a Record type variable to store each record. In the following lab, you will run an aggregated Select statement against the sample Microsoft Access database in the GitHub repository. This Access database has a table called tblSales, and the structure of the table is shown in the following screenshot:

	Field Name	Data Type
3	ID	AutoNumber
	Country	Short Text
	Item Type	Short Text
	Sales Channel	Short Text
	Order Priority	Short Text
	Order Date	Date/Time
	Order ID	Number
	Ship Date	Date/Time
	Units Sold	Number
	Unit Price	Currency
	Unit Cost	Currency
	Total Revenue	Currency
	Total Cost	Currency
	Total Profit	Currency

For this lab, we will configure our bot to do the following:

- Group by the Item Type field
- Count the total Item Type records for each group
- Sum the Units Sold values for each group
- Sum the Total Profit values for each group

To achieve this, we will run the following SQL statement:

```
SELECT [Item Type] As Type, Count([Item Type]) as Orders, Sum([Units Sold]) as
Quantity, Sum([Total Profit]) as Profit FROM tblSales GROUP BY [Item Type] ORDER BY
[Item Type]
```

The bot will run the statement and retrieve the results in a CSV file as well as displaying a **Message box** for each record returned.

Let's start this lab by performing the following steps:

- 1. To keep our bot organized, let's begin by adding a new **Step** and setting the **Title** property to **Reading from Databases**.
- 2. Keeping up with tidy scene, it would make sense to collapse the **Step** . Your development interface should look like the following screenshot:



3. Click on **Save**.

- 4. As we will be reading records, we will need a Record type variable. Create a Record type variable and call it recData.
- 5. We are now ready to create our connection. Drag the **Database: Connect** action , ensuring it is within the **Step** .
- 6. To create our connection, set the following properties for the **Database: Connect** action:

Session name: db_Access

Connection mode: User defined

Database type: Microsoft Access

Database file path: Desktop file -- C:\Hands-On-RPA-with-AA-Sample-

Data\Chapter15_Access.accdb

The properties should look like the following screenshot:

ession nan	227					
99 db_A	ccess					(x)
Connection	mode					
Jser defin	ned					
Database	e type					
Microso	oft Access					,
Datab	ase file path					
Cont	trol Room file	Desktop file	Variable			
1	0111 1 0	201 11		 er15_Access.accd	b (x)	Browse

- 7. Click on Save.
- 8. Next, we add the action to read the data using the SQL statement and send the results to a CSV file. To do this, add the **Database: Read** action , ensuring it is aligned to the **Database: Connect** action .
- 9. Set the following properties for the **Database: Read** action:

Session name: db Access


Enter SELECT Statement: SELECT [Item Type] As Type, Count([Item Type]) as Orders,
Sum([Units Sold]) as Quantity, Sum([Total Profit]) as Profit FROM tblSales GROUP
BY [Item Type] ORDER BY [Item Type]

Export data to CSV: Desktop file -- C:\Hands-On-RPA-with-AA-Sample-Data\Chapter15 Sales.csv

Export data with header: Checked

When saving: Overwrite existing file

The properties should look like the following screenshot:

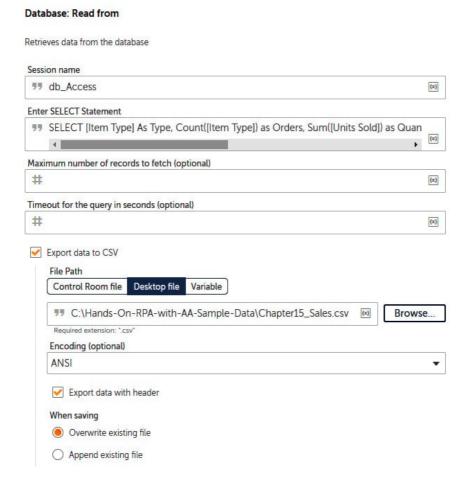

10. Click on Save.

- 11. At this point, the bot would have retrieved the full dataset from the SQL statement. As we want to see the data for each record, we will add a loop to iterate through our dataset. To do this, drag the **Loop** action , ensuring it is aligned to the **Database: Connect** action .
- 12. Set the following properties for the **Loop** action:

Loop Type: Iterator


Iterator: For each row in a SQL query dataset

Session name: db_Access

Assign the current row to this variable: recData - Record

Loop

Repeats the actions in a loop until a break

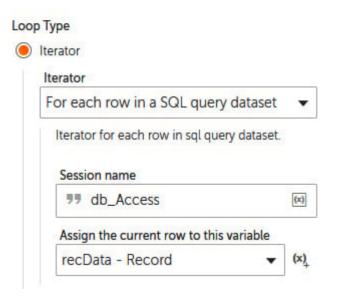

- 13. Click on Save.
- 14. We will also add a **Message box** so that we can see each record as the bot iterates through the dataset. To do this, add the **Message box** action, ensuring it is within the **Loop** action.
- 15. Set the following properties for the **Message box** action:

Enter the message box window title: Reading a SQL Dataset

Enter the message to display: Type: |\$recData[0]\$|

Orders: |\$recData[1]\$|
Quantity: |\$recData[2]\$|
Profit: |\$recData[3]\$|

Scrollbar after lines: 30 (default value)

Close message box after: Checked

Seconds: 5

Message box Displays a message box Enter the message box window title 99 Reading a SQL Dataset (x) Enter the message to display JJ Type: |\$recData[0]\$| Orders: |\$recData[1]\$| Quantity: |\$recData[2]\$| Profit: |\$recData[3]\$| (x) Scrollbar after lines # 30 (x) ✓ Close message box after Seconds # 5 (x)


- 16. Click on Save.
- 17. The only action remaining is to add the **Database: Disconnect** action. To do this, add the **Database: Disconnect** action , ensuring it is aligned to the **Database: Connect** action and not inside the **Loop** action .
- 18. Set the following property for the **Database: Disconnect** action :

Session name: db Access

The property should look like the following screenshot:



19. Click on **Save**. Your development interface for this section should look like the following screenshot:

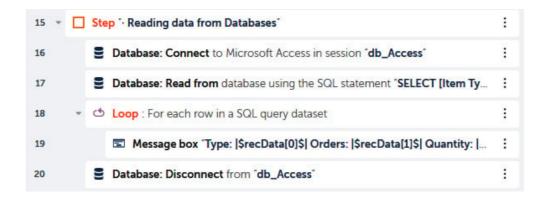

That's how we retrieve and read data from a database. No matter how you have created your session, the preceding lab will work on all database types. Go ahead and run your bot. You should get a **Message box** for each record retrieved. A CSV file, <code>Chapter15_Sales.csv</code>, will also be generated with results. This output file should look like the following screenshot:

1	Α	В	С	D
1	Item Type	ORDERS	QUANTITY	PROFIT
2	Baby Food	7	40545	3886643.7
3	Beverages	8	56708	888047.28
4	Cereal	7	25877	2292443.43
5	Clothes	13	71260	5233334.4
6	Cosmetics	13	83718	14556048.66
7	Fruits	10	49998	120495.18
8	Household	9	44727	7412605.71
9	Meat	2	10675	610610
10	Office Supplies	12	46967	5929583.75
11	Personal Care	10	48708	1220622.48
12	Snacks	3	13637	751944.18
13	Vegetables	6	20051	1265819.63

Task: Reading data from SQLite

Just out of curiosity, if you want to try reading data from the SQLite database, you can use the following connections and SQL statements to retrieve your dataset:

SQL statement to retrieve data from the sample SQLite database:

```
Connection string: SqLite Database - Chapter15_SQLite.db
SQL Statement: SELECT * FROM playlists
```

The output CSV file should look like this:

1	Α	В
1	PlaylistId	Name
2	1	Music
3	2	Movies
4	3	TV Shows
5	4	Audiobooks
6	5	90's Music
7	6	Audiobooks
8	7	Movies
9	8	Music
10	9	Music Videos
11	10	TV Shows
12	11	Brazilian Music
13	12	Classical
14	13	Classical 101 - Deep Cuts
15	14	Classical 101 - Next Steps
16	15	Classical 101 - The Basics
17	16	Grunge
18	17	Heavy Metal Classic
19	18	On-The-Go 1

Now that you know everything about retrieving data, let's make things more interesting. In the next section, you will learn how to run action queries against your database. This is updating records, inserting new records, and deleting records.

Updating databases

Let's start this lab by performing the following steps:

- 1. Add a **Step**, set the **Title** property as Updating to Databases , and then click on **Save**.
- 2. Again, we will add our connection to the Access database, dragging the **Database: Connect** action , ensuring it is within the **Step** action .
- 3. As you've done previously, set the following properties for the **Database: Connect** action:

Session name: db_Access

Connection mode: User defined


Database type: Microsoft Access

Database file path: Desktop file -- C:\Hands-On-RPA-with-AA-Sample-

Data\Chapter15_Access.accdb

Database: Connect

Connects to a database

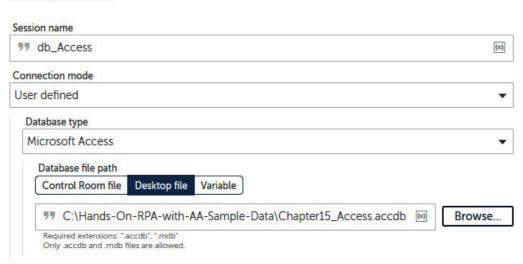


- 4. Click on Save.
- 5. Add another **Step**, ensuring it is within the previous **Step** property as "Inserting data INSERT Statement", and then click on **Save**.
- 6. Add another **Step**, ensuring it is aligned to the **Step**, set the **Title** property as "Updating data UPDATE Statement", and then click on **Save**.
- 7. Add another **Step**, ensuring it is aligned to the **Step**, set the **Title** property as "Deleting data DELETE Statement", and then click on **Save**.
- 8. Finally, add the **Database: Disconnect** action just below line **25**, ensuring it is aligned to the **Database: Connect** action and not inside the **Step**.
- 9. Set the following property for the ${\bf Database:\ Disconnect\ }$ action :

Session name: db Access

The property should look like the following screenshot:



10. Click on Save. Your development interface for this section should look like the following screenshot:

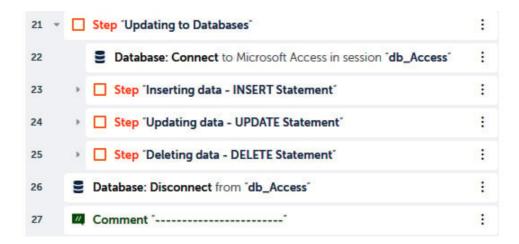

That's great! We now have a structure for our lab. We have a single connection and a single disconnect action. While the bot has the session open to the Access database, we can add the three different types of action statements. We will start with inserting data.

Inserting data

The Access database, <code>Chapter15_Access.accdb</code>, has a table called <code>tblTypes</code>. This table consists of all the product types sold. There is only one field in this table, called <code>ItemType</code>. Currently, there are 12 records in this table, as you can see:



In the lab, our bot will insert a new type of product, <code>Electrical</code> . This will bring the total record count to 13. To insert this new record, the SQL statement would be as follows:

```
INSERT INTO tblTypes (ItemType) VALUES 'Electrical';
```

Let's start this lab by performing the following steps:

1. To add this Insert SQL statement, add the **Database: Insert/Update/Delete** action, ensuring it is inside **Step**.

2. Set the following properties for the **Database: Insert/Update/Delete** action:

Session name: db_Access

Statement: INSERT INTO tblTypes (ItemType) VALUES 'Electrical';

The properties should look like the following screenshot:

Database: Insert/Update/Delete Executes a statement at the database Session name 79 db_Access Statement 79 INSERT INTO tblTypes (ItemType) VALUES 'Electrical'; Timeout for the query in seconds (optional)

3. Click on Save.

With the first SQL statement done, this will invoke the bot to add a new record in the tblTypes table. We will run the bot once all three statements are done. Let's now move on to the next one, where you will learn how to execute an **Update** SQL statement.

Updating data

For this lab, we will continue working with the tblTypes table. One item in the table is Fruits. We will configure our bot to update this value to Fresh Fruits. The SQL statement to apply this update would be as follows:

```
UPDATE tblTypes SET ItemType = "Fresh Fruits" WHERE ItemType = "Fruits"
```

Let's start this lab by performing the following steps:

- 1. To add this Update SQL statement, add the **Database: Insert/Update/Delete** action, ensuring it is inside the **step**.
- 2. Set the following properties for the **Database: Insert/Update/Delete** action:


The properties should look like the following screenshot:

Session name: db_Access

Statement: UPDATE tblTypes SET ItemType = "Fresh Fruits" WHERE ItemType = "Fruits"

Database: Insert/Update/Delete

Executes a statement at the database

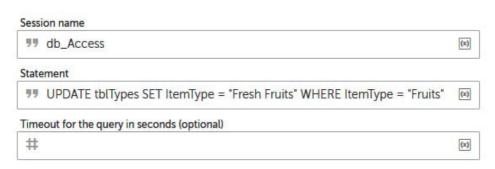

3. Click on Save.

Thus, the second SQL statement is done. This will update the Fruits value to Fresh Fruits in the tblTypes table. There is now one more SQL statement to do, and that's the Delete statement.

Deleting data

This is the final lab for this lab; you will learn how to apply a <code>Delete</code> SQL statement. Again, we will work on the same table, <code>tblTypes</code>. In this example, we want the bot to delete the record where the <code>ItemType</code> value is <code>Cereal</code>. The SQL statement to apply this <code>Delete</code> statement would be as follows:

```
DELETE FROM tblTypes WHERE ItemType ="Cereal";
```

Let's start this lab by performing the following steps:


- 1. To add this Delete SQL statement, add the **Database: Insert/Update/Delete** action, ensuring it is inside the **step**.
- 2. Set the following properties for the **Database: Insert/Update/Delete** action:

Session name: db_Access


Statement: DELETE FROM tblTypes WHERE ItemType ="Cereal";

Database: Insert/Update/Delete

Executes a statement at the database

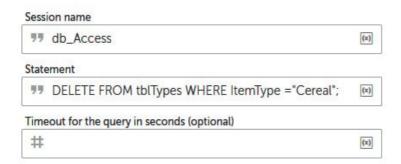

3. Click on Save. The development interface for this entire section should look like the following screenshot:

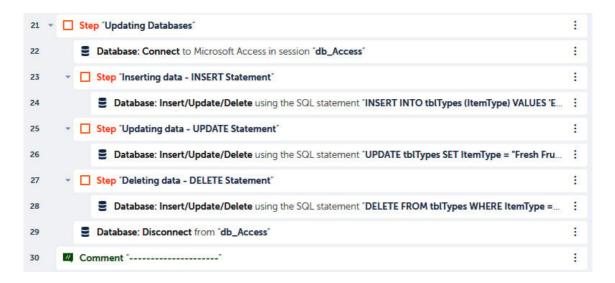

That's the final SQL statement! You now know how to automate all three of the SQL action queries. This will allow you to add RPA automation to your database-related manual tasks. Go ahead and run the bot. After the bot has completed, the <code>ltemTypes</code> table should be looking like this:



You can see that a new record with the value Electrical has been inserted, the Fruits value has been updated to Fresh Fruits, and the record with the Cereal value has been deleted.

Summary

This lab has taken you into the world of automation with databases. As you worked through the different lab, you have learned how to connect to various types of databases. Aside from connecting, you have acquired the skills needed to read, update, insert, and delete data from your databases. All this automation will help reduce the time you spend on manual tasks daily.